 


# Operating Instructions For PHAZR-5 Cable Remote Control

UR5U-9000L & UR5U-9020L

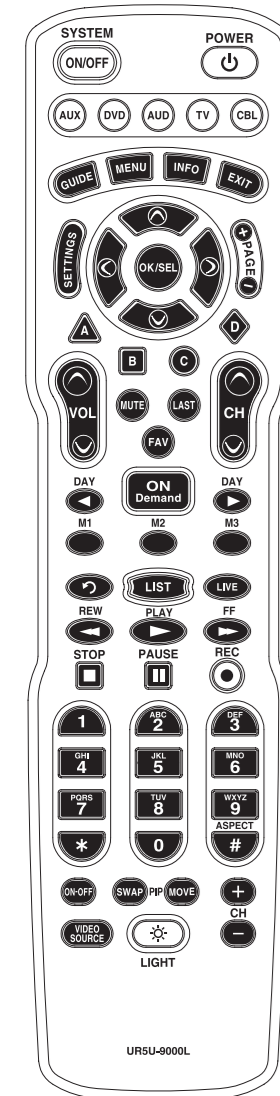

Universal Remote Control, Inc.  
www.universallremote.com  
OCE-0081A Rev 01 (12/09/09)

## 1 Introduction

 
The PHAZR-5 UR5U-9000L & UR5U-9020L is designed to operate the CISCO / SA, Pioneer, Pace Micro, Samsung and Motorola digital set tops, Plus the majority of TV, AUD, DVD and AUX equipment on the market as shown below.

**CABLE** : Cable Converters  
**AUD** : Audio Receivers  
**AUX** : Media PC, Gaming System, etc.

## 2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

- STEP1** Remove the battery compartment cover on the back of your remote control.
- STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3** Replace the battery compartment cover.

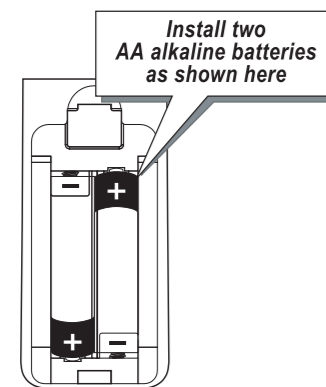


## 3 Operations

**DEFAULT STATE:** Component Default: CABLE Set Top Box (STB)  
**Channel Default:** CABLE channel and numbers through the CABLE STB. You have the option of controlling your CABLE channel and numbers through the TV or AUD. Refer to section **G** for programming steps.

**Volume Default:** Volume and Mute control are automatically transferred to the respective Component mode you select, as follows: CBL: Cable Set Top Box / TV: TV / AUD: AUD. Volume and Mute control for DVD are automatically transferred to the TV. However, you have the option of controlling CABLE Volume and Mute through the TV, DVD or AUD. Refer to section **H** for programming steps.
 
## 4 Button Functions

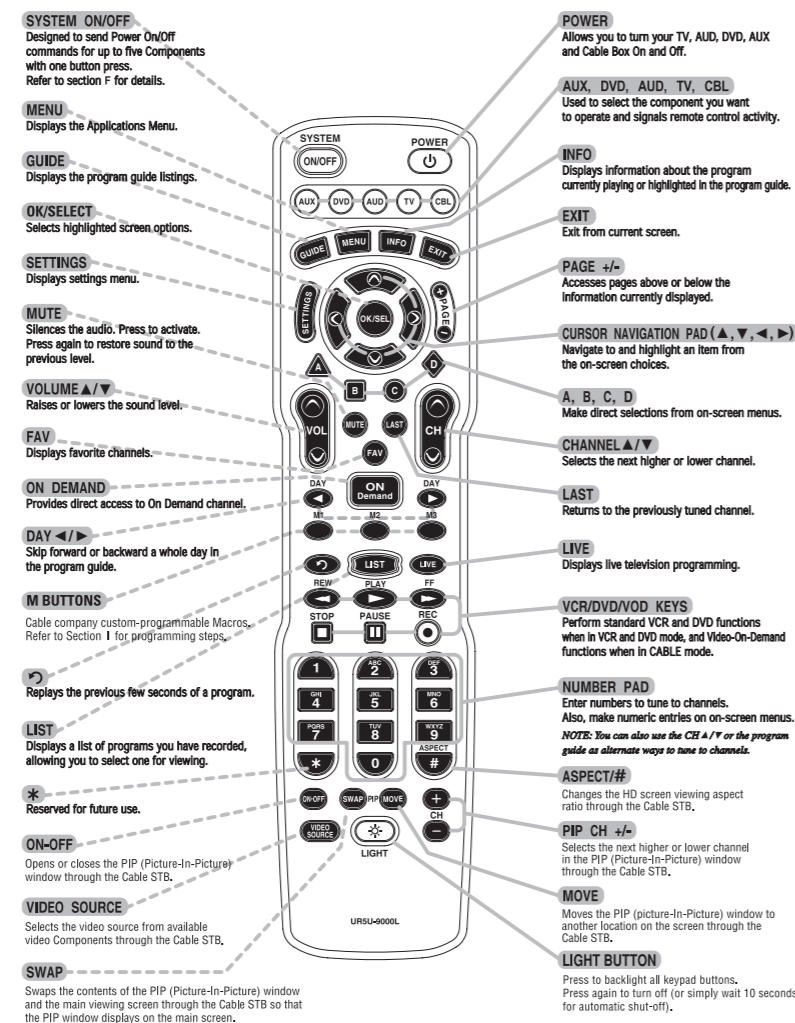

## 5 Programming the Remote Control

There are three ways you can program your remote:

- \* Quick Set-Up Method
- \* The Pre-Programmed 3-Digit Code Method
- \* The Auto-Search Method

The Quick Set-Up Method is a unique new feature that enables the fastest and easiest set-up by using one-digit codes for up to 10 major brands for each component.

The Pre-Programmed Code Method allows you to setup all the buttons at once by entering 3-digit code numbers that correspond to a particular Component's manufacturer/brand, so it's the fastest and easiest of the two methods. (Code Tables are on the backside of this Instruction Sheet.) The Auto-Search Method scans through all the codes in the remote control, one at a time.

### IMPORTANT SETUP NOTE!

This pertains to all programming steps. When you are in setup mode, a component LED will light for 30 seconds. If you do not press a button within 30 seconds, the LED light will turn off and exit setup mode and you will need to start over.

## A. Quick Set-Up Method

- STEP1** Turn on the device you want to program to program your TV, turn the TV on.
- STEP2** Point the remote at the TV and press and hold TV key for 3 seconds. While Holding the TV key, the TV LED will light off and on again. Begin to press the number keys, one at a time, starting with 1, then 2,3..0 until the TV turns off.
- STEP3** Release the TV key to save the code. The TV LED will blink twice to confirm the code is stored.

Repeat these steps for your AUD, DVD, AUX, etc.

## B. Pre-Programmed 3-Digit Code Method

- STEP1** Turn on the Component you want to program (TV, AUD, DVD or AUX).
- STEP2** Press the [COMPONENT] button (TV, AUD, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds indicating the unit is ready to be programmed.
- STEP3** Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.

**\*Note :** If the 3-digit code number you just entered is correct, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.

- STEP4** After you've entered the correct code number and the Component has turned Off, press the [POWER] button to turn the Component back On. Now it is time to test the VOLUME and MUTE buttons for the TV (or PLAY and STOP buttons for DVD) to make sure they all work. If any of the functions do not work as they should, repeat from STEP 3 using the next 3-digit code number listed for that brand until you find the best Component code.
- STEP5** Once you have found the correct 3-digit code, save it by pressing the same [COMPONENT] button one more time. The Component LED light will blink twice to confirm that the code was successfully stored.

**Now, program the rest of your Components by repeating STEPS 1-5.**

**\*Note :** If the Pre-Programmed Method did not work, or if the Code Tables do not list your Component brand, use the Auto-Search Method as explained in Section C.

## C. Auto-Search Method

- STEP1** Turn on the Component you want to program (TV, AUD, DVD or AUX).
- STEP2** Press the [COMPONENT] button (TV, AUD, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds indicating the unit is ready to be programmed.
- STEP3** Point the remote toward the Component and press the [CH▲] or [CH▼] button one step at a time or keep it pressed. The remote will emit a series of ON/OFF commands. Release the [CH▲] or [CH▼] button as soon as the Component turns Off.
- STEP4** Test functions. (Same as for 3-Digit Code Programming Method - Section B). If any of the functions do not work as they should, repeat from STEP 3 using [CH▲] or [CH▼] buttons to find the correct code.
- STEP5** Save the code. (Same as for 3-Digit Code Programming Method - Section B).

**Now, repeat the Auto-Search Method for those Components you could not program earlier with the Pre-Programmed Method.**

## D. Finding a Component Button's Setup Code Number

If you used the Auto-Search Method to program a Component, you may not know what the correct code number is. Here is a way for you to identify the code number, so you can record it for future reference.

- STEP1** Press the [COMPONENT] button (TV, AUD, DVD or AUX) you want to verify and the [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds.
- STEP2** Press the [INFO] button and count the number of times the Component LED light blinks. This number indicates the first digit of the code, followed by the second and third, each separated by a one second pause when the LED will turn off.

**\*Note :** 10 blinks represents the number zero.  
**Example :** One blink, (pause), eight blinks, (pause) and three blinks, indicates code number 183.

## E. AUX Function: Programming a 5<sup>th</sup> Component

You can take advantage of the AUX function to program a 5<sup>th</sup> Component such as a second TV, AUD, DVD or Audio Component.

- STEP1** Turn on the 5<sup>th</sup> Component you want to program (TV, AUD, DVD or Audio).
- STEP2** Press the [AUX] button and the [OK/SEL] button simultaneously for 3 seconds. The [AUX] Component LED will turn on for 30 seconds.
- STEP3** Press the [COMPONENT] button you want to setup. Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.

**\*Note :** If the 3-digit code number you just entered is the correct number, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.

- STEP4** Test functions. (Same as for 3-Digit Code Programming Method - Section B). If any of the functions do not work as they should, you need to find a new code.
- STEP5** Once you have found the correct 3-digit code, save it by pressing the [AUX] button one more time. The Component LED light will blink twice to confirm the code was stored. Now when you press the AUX button, all the buttons will work with that 5<sup>th</sup> Component.

## F. Programming the System On/Off Button

This allows you to program the System On/Off button so it can send up to five power On/Off commands with one button press.

- STEP1** Press the [CBL] button.
- STEP2** Press the [SYSTEM ON/OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.
- STEP3** Press the first [COMPONENT] button you want to store in the [SYSTEM ON/OFF] button and then the [POWER] button. Repeat this for other Components until you have stored all the desired power commands into the [SYSTEM ON/OFF] button.
- STEP4** Press the [CH▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the commands have been saved.

## G. Programming Channel Control

You can program the channel controls (Channel Up, Channel Down, Last and Numbers) from one Component to operate in another Component mode. Default channel control settings on the remote control are as follows:

**CBL** : CBL **TV** : CBL **AUD** : AUD  
**DVD** : DVD **AUX** : AUX

If you wish to store the TV channel control in TV mode, use the following steps.

- STEP1** Press the [TV] button and the [OK/SEL] button simultaneously for 3 seconds. The [TV] Component LED will turn on for 30 seconds.
- STEP2** Press the [VOL ▼] button.
- STEP3** Press the [TV] button again. The Component LED will blink twice to confirm the programming.

**To return to original state:**

If you wish to restore the CABLE channel control in TV mode, repeat the above steps but press [CBL] in **STEP3**.

## H. Programming Volume Control

Volume and Mute control are factory-programmed to automatically transfer to the respective Component mode you select, as follows:

**CBL** : CBL **TV** : TV **AUD** : AUD  
**DVD** : TV **AUX** : AUX

However, you can program the volume controls (Volume Up, Volume Down and Mute) from one Component to operate in another Component.

If you wish to store the TV volume control in CBL mode, use the following steps.

- STEP1** Press the [CBL] button.
- STEP2** Press the [SYSTEM ON/OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.
- STEP3** Press the first [COMPONENT] button you want to store in the [SYSTEM ON/OFF] button and then the [POWER] button. Repeat this for other Components until you have stored all the desired power commands into the [SYSTEM ON/OFF] button.
- STEP4** Press the [CH▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the commands have been saved.

**To return to original state:**

If you wish to restore the CBL volume control in CBL mode, repeat the above steps but press [CBL] in **STEP3**.

## I. Programming a 'Macro' button.

If your remote model has custom-programmable Macro buttons available, they can be programmed to act as a 'Macro' or Favorite Channel button in CABLE mode. This allows you to program up to five 2-digit channels, four 3-digit channels or three 4-digit channels that can be accessed with one button press.

- STEP1** Press the [CBL] button to select the CBL mode.
- STEP2** Press the [MACRO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.
- STEP3** Enter the the 2, 3 or 4-digit code for the channel you want programmed first (for example, 007) using the Number Pad, then press the [STOP] button. Then enter the code for the next channel (for example, 050), then press the [STOP] button. Repeat this process for the third channel. The [CBL] button will blink once for each channel entered.
- STEP4** Press the [CH▲] button to store the channels that were selected. The [CBL] button will blink twice to confirm the storage of commands.

**To access the programmed channels, press the [MACRO] button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.**

**J. Low Battery Warning**

When the batteries are low and need to be replaced with fresh batteries, the Component LED lights will blink 2 times in sequence whenever a [POWER] button is pressed to turn on equipment.

## K. Memory Lock System

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

## L. Record Your Component Set-up Codes

TV Set-up Code Number:   
AUD Set-up Code Number:   
DVD Set-up Code Number:   
AUX Set-up Code Number:

For additional information about your remote control, go to [www.universallremote.com](http://www.universallremote.com)

## 6 Quick Set-up Code Tables

Quick Number	Manufacturer/Brand
0	FUJITSU
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	PHILIPS

## AUDIO

Quick Number	Manufacturer/Brand
0	ROTEL
1	DENON
2	YAMAHA
3	MARANTZ
4	SONY
5	INTEGRA
6	HARMAN KARDON
7	PIONEER
8	ONKYO
9	LEXICON

## DVD

Quick Number	Manufacturer/Brand
0	HITACHI
1	SONY
2	PHILIPS
3	SAMSUNG
4	PHILIPS MAGNAVOX
5	PANASONIC
6	LG
7	JVC
8	DENON
9	PIONEER

## AUX

Quick Number	Manufacturer/Brand
0	BOSE
1	HP
2	APPLE / iPod
3	APPLE / iPod
4	MICROSOFT / XBOX
5	SONY / PS2
6	LUTRON
7	X-10
8	X-10
9	MICROSOFT / XBOX

## 7 Set-up Code Tables

Manufacturer/Brand	Set-Up Code Number
CISCO / SA	001 003 041 042 045 046
PIONEER	001 103 034 051 063 076 105
PACE	001 005 002
SAMSUNG	001 030
MOTOROLA	002 111 148
DIGEO	153
GENERAL INSTRUMENT	005 103 104
HAMLIN	049 050 055
HITACHI	103 055
JERROLD	005 004 103 005 003 008 009 010 069
CITIZEN	010 012
MAGNAVOX	052
MEMOREX	052
MOXI	111 252 153
INFUSION	192
PANASONIC	044 047
PHILIPS	006 012 013 020 085
PULSAR	052
RCA	047
REGAL	049 050
REGENCY	057
SKY	230 204
SONY	108
SPRUCER	047
TELNET	354
TOCOM	039 040 056
TOSHIBA	052
VIEWSTAR	012 015
ZENITH	052 060 093 100

## TV

Manufacturer/Brand	Set-Up Code Number
A MARK	112 143
ABEX	025
ACCURIAN	036
ADMIRAL	072 251 333
ADVENT	247 388
ADVENTURA	002
AIKO	103
AKAI	116 146 248 404 405 473 475 323 387 391
ALBATRON	017
ALERON	028
AMERICA ACTION	043
AMPRO	073
AMSTRAD	052
ANAM	043 054 056 080 112
AOC	116 363 112 058
APEX	572
APEX DIGITAL	006
AQUAVISION	573 574
ASTAR	477
AUDIOVOX	076 454 388
AVENTURA	052
AVION	441
AXION	039
BELCOR	116
BELL&HOWELL	333 072
BENQ	423
BOXLIGHT	266
BRADFORD	043
BROCKWOOD	116
BROKSONIC	238
BYDESIGN	031 032
CANDLE	116 002 003 363
CAPEHART	058
CARY AUDIO DESIGN	266
CELEBRITY	001
CENTURION	116
CETRONIC	043
CHANGHONG	247
CITIZEN	116 002 003 363 043 258 103 143
CLARION	043
CLASSIC	043
CLP CLASSIC	333
COLORTYME	116
CONCERTO	363
CONCIERGE	073
CONTEC	043 050 051
CORNEA	116
CORONADO	143
CRAIG	043 054
CROSLEY	164
CROWN	043 143
CURTIS MATHES	116 258 363 143
CXC	043
CYBERHOME	015
DAEWOO	363 016 043 044 076 103 114 125 127 143
DAYTRON	363 143
DELL	320 164 363
DIGITAL PROJECTION	570
DIMENSIONA	333
DREAMVISION	235
DUKANE	011 025
DUMONT	116 073
DURABRAND	096 052
DWIN	257
DYNASTY	043
DYNEX	400
EIKI	187
ELECTROBAND	001
ELECTROGRAPH	466
ELECTROHOME	143 024 076 196
ELEKTRA	072
ELEMENT	363 494 526
EMERSON	028 048 043 155 005 116 363 047 050 051 076 096 143 153 154 052 514
ENVISION	116
EPSON	324 590
ESA	323
FISHER	007 057
FUJITSU	246 198 410
FUNAI	028 043 052
FUTURETECH	043
GATEWAY	242 268
GE	073 116 008 009 034 056 074 155 333 363
GEM	391
GIBRALTER	116 073
GO VIDEO	026
GOLDSTAR	113 116 102 363 106 112 127 143

## TV

Manufacturer/Brand	Set-Up Code Number
BRADFORD	043
BROCKWOOD	116
BROKSONIC	238
BYDESIGN	031 032
CANDLE	116 002 003 363
CAPEHART	058
CARY AUDIO DESIGN	266
CELEBRITY	001
CENTURION	116
CETRONIC	043
CHANGHONG	247
CITIZEN	116 002 003 363 043 258 103 143
CLARION	043
CLASSIC	043
CLP CLASSIC	333
COLORTYME	116
CONCERTO	363
CONCIERGE	073
CONTEC	043 050 051
CORNEA	116
CORONADO	143
CRAIG	043 054
CROSLEY	164
CROWN	043 143
CURTIS MATHES	116 258 363 143
CXC	043
CYBERHOME	015
DAEWOO	363 016 043 044 076 103 114 125 127 143
DAYTRON	363 143
DELL	320 164 363
DIGITAL PROJECTION	570
DIMENSIONA	333
DREAMVISION	235
DUKANE	011 025
DUMONT	116 073
DURABRAND	096 052
DWIN	257
DYNASTY	043
DYNEX	400
EIKI	187
ELECTROBAND	001
ELECTROGRAPH	466
ELECTROHOME	143 024 076 196
ELEKTRA	072
ELEMENT	363 494 526
EMERSON	028 048 043 155 005 116 363 047 050 051 076 096 143 153 154 052 514
ENVISION	116
EPSON	324 590
ESA	323



**TV**

Manufacturer/Brand	Set-Up Code Number
GRUNPY	028 043
HAIER	363 501
HALL MARK	363
HANNSPREE	349 381
HARLEY DAVIDSON	028
HARVARD	043
HAVERMV	081
HELLO KITTY	076
HIMITSU	043
HISENSE	419 442
HITACHI	011 166 009 010 012 023 075 143 158 072 363 250 587
HP	378 316 327 421
HUMAX	518
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457
INTEQ	073
JANEIL	002
JBL	164
JCB	001
JCPENNEY	024 116 008 009 030 065 258 143 333 363
JENSEN	013
JVC	038 034 001 083 199 210 533 581
KAWASHO	116 001
KEC	043
KENWOOD	116 001
KLEGG	466
KLOSS	002 059
KMC	143
KNOLL SYSTEMS	230
KONKA	457
KREISEN	530
KTV	043 116 143 154
KURAZAI	072
LG	363 113 116 102 106 112 127 143 569 284
LITEON	268
LODGENET	072
LOEWE	164
LOGIK	072
LUXMAN	363
LXI	166 007 138 052 251 333 164
MAGNAVOX	164 059 116 003 060 061 363 127 022 333 094 226 390 467 431
MAJESTIC	333 072
MARANTZ	116 164 281 562 584
MATSUI	164
MATSUSHITA	080
MAXENT	242
MEGATRON	116 011
MEMOREX	007 072 363
MGA	116 363 024 028 042
MIDLAND	333 073
MINTEK	362
MINUTZ	008
MISAKAI	052
mitsubishi	124 109 024 028 040 042 146 363 348

**TV**

Manufacturer/Brand	Set-Up Code Number
MONIVISION	017
MONTGOMERY WARD	333 072
MOTOROLA	081
MTI	116 363 258
MULTITECH	043
NAD	138 025
NEC	272 197134 116 040 016 024 056 019 262 236 281 575
NET TV	242
NIKEI	043
NIKKO	116
NIKO	527
NORCENT	390
NORWOOD MICRO	027
NTC	103
NUVISION	351 567
OLEVIA	432 363 333
ONKING	043
ONWA	043
OPTIMUS	025
OPTOMA	265 249
OPTONICA	019 251
ORION	096
PANASONIC	080 034 056 164 208 359 552 524
PHILCO	116 003 059 060 164 363 024 056
PHILIPS	164 005 093 038 116 003 363 059 127 206 431 333 161 594
PILOT	116
PIONEER	234 135 025 018 023 116 393 272 520 582
POLAROID	388 323 328 353 354 355 356 494 387 391 505 506 508
PORTLAND	363 143
PRINCETON	004
PRISM	034
PROSCAN	333
PROTON	363 112 058 143 171 172 033 528
PROTRON	392 398 498 499 500
PROVIEW	494
PROX	572
PULSAR	116 073
QUASAR	034 056
RADIO SHACK	019 363 143 043 127
RCA	333 065 116 363 024 056 152 023 074 161 588
REALISTIC	007 019 043 047
REVOLUTION HD	466
RUNCO	182 073 395 416 072 342
SAMPO	116 058 363 242
SAMSUNG	258 050 089 105 363 127 143 333 228 229
SAMSUX	116
SANSEI	076
SANSUI	096 400
SANYO	166 007 020 053 057 082 187 511 266
SCEPTRE	276
SCOTCH	116
SCOTT	028 043 048 143 363 497
SEARS	030 363 007 028 057 143 094 333 082 166 138
SELECO	205 011
SHARP	251 019 014 028 029 363 022 143 175 308

**TV**

Manufacturer/Brand	Set-Up Code Number
SHENG CHIA	081
SHERWOOD	349
SHOGUN	116
SIGNATURE	072
SIMPSON	003
SONY	001
SOUNDESIGN	028 363 003 043
SOVA	041
SOYO	528 033
SPECTRICON	112
SPECTRONIQ	499 500
SQUAREVIEW	052
SSS	363 043
STARLITE	043
SUPERSCAN	052 081
SUPRA	116
SUPREMACY	002
SUPREME	001
SVI	328
SYLVANIA	116 003 052 059 060 164 044 333 127 514 593
SYMPHONIC	052
SYNTAX OLEVIA	432 363 333
TANDY	251
TATUNG	056
TECHNICS	034 080
TECHNOL ACE	028
TECHVIEW	045 557
TECHWOOD	363
TEKNIKA	002 003 363 024 028 043 072 258 143
TELEFUNKEN	037 046
TELERENT	072
TERA	172
THOMSON	049 055
TMK	363
TINCI	073
TOSHIBA	138 030 007 040 258 325 230
TOTEVISION	143
TRUTECH	529
TVS	096
UNIVERSAL	008 009
VICTOR	038
VIDEO CONCEPTS	146
VIDIKRON	174 164 188 192 342
VIDTECH	363
VIEWSONIC	242 389
VIKING	002
VIQRE	472 592
VISCO	526
VITO	363
VIZIO	386 387
WARDS	363 008 009 019 028 060 061 072 074 143 164 034
WAYCON	015
WESTINGHOUSE	076 276 435 001
WINBOOK	339
YAMAHA	116 363 370
YORK	363
YUPITERU	043
ZENITH	363 073 072 095 103
ZONDA	112

**TV-LCD & Plasma TVs**

Manufacturer/Brand	Set-Up Code Number
ACCURIAN	036
ADVENT	247 388
AKAI	404 405 473 475 323 387 391
AOC	116 363
APEX	572
APEX DIGITAL	006
AQUAVISION	573 574
ASTAR	477
AUDIOVOX	454 388 076
AVION	441
AXION	039
CHANGHONG	247
CYBERHOME	015
DAEWOO	076 363
DELL	320 164 363
DURABRAND	052
DWIN	257
DYNEX	400
ELEMENT	363 494 526
EMERSON	514 363 076 052
ESA	323
FUJITSU	246 198
FUNAI	052
GATEWAY	242 268
GO VIDEO	026
HAIER	363 501
HANNSPREE	349 381
HISENSE	419 442
HITACHI	011 363
HP	378 316 327 421
HUMAX	518
HYUNDAI	337 338
ILO	472
INFOCUS	547 470
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457
JVC	038 210 581
KLEGG	466
KONKA	457
KREISEN	530
LG	363 569 113 116 284
LITEON	268
LOEWE	164
MAGNAVOX	164 363 226 390 467 431
MARANTZ	116 164 281
MAXENT	242
MINTEK	362
MITSUBISHI	124 363
NEC	272 262 575
NIKO	527
NORCENT	390
NORWOOD MICRO	027
NUVISION	351 567
OLEVIA	432 363 333
PANASONIC	080 164 208 552 524
PHILIPS	164 363 431 161 594
PIONEER	234 135 393 272 520 582
POLAROID	388 323 328 353 356 494 387 391 505 506
PRINCETON	004
PROTON	033 528
PROTRON	392 398 498 499 500

**TV-LCD & Plasma TVs**

Manufacturer/Brand	Set-Up Code Number
PROVIEW	494
PROX	572
RCA	333 363 161 588
REVOLUTION HD	466
RUNCO	395 416
SAMPO	363 242
SAMSUNG	258 228 229
SANSUI	096 400
SANYO	166 007
SCEPTRE	276
SHARP	251 363
SHERWOOD	349
SONY	001
SOVA	041
SOYO	528 033
SPECTRONIQ	499 500
SVA	328
SYLVANIA	052 164 333 514
SYMPHONIC	052
SYNTAX OLEVIA	432 363 333
TATUNG	056
TECHVIEW	045 557
TOSHIBA	138 258 325
TRUTECH	529
VIEWSONIC	242 389
VIQRE	472 592
VISCO	526
VIZIO	386 387
WESTINGHOUSE	076 276 435 001
WINBOOK	339
YAMAHA	116 363
ZENITH	363 073 072

**TV-Projection TVs**

Manufacturer/Brand	Set-Up Code Number
AKAI	404 405 473 475
DAEWOO	076
EPSON	324
HITACHI	011
HP	378
INFOCUS	333 548
JVC	038
LG	363
LOEWE	164
MAGNAVOX	164 333
MITSUBISHI	109
OPTOMA	265
PANASONIC	080 524
PHILIPS	164 431
RCA	333
SAMSUNG	258
SANYO	166 007 187
SHARP	251
SONY	001
TOSHIBA	138
ZENITH	363 073 072

**TV-Projectors**

Manufacturer/Brand	Set-Up Code Number
BENQ	423

**TV-Projectors**

Manufacturer/Brand	Set-Up Code Number
BOXLIGHT	266
DIGITAL PROJECTION	570
DREAMVISION	235
EPSON	590
FUJITSU	410
HITACHI	250
INFOCUS	230 532 564
JVC	199 533
KNOLL SYSTEMS	230
MARANTZ	281 562 584
MITSUBISHI	348
MONDIAL	157 158 042 043 081 112
MYRYAD	077
NAD	186 113
NAKAMICHI	040 244 245 172 183 287
NEC	176
NILES	403
ONKYO	275 017 046 108 080 209 381
OPTIMUS	026 041
OUTLAW	342
PANASONIC	032 195 219 177 292 626
PARASOUND	129 130 132 261 294 295 333 334
PHILIPS	249 250 063
PIONEER	014 039 044 069 168 116 035 063 198 480
PROCEED	144 268
RCA	010 048 117 156 067 288
REALISTIC	019 073 075 095
ROTEL	074 083 085
SAMSUNG	016
SANSUI	040 048 110 063 065 228
SANYO	214
SCOTT	019
SHARP	026 094 175
SHERWOOD	024 102 106 447 370
Sony	001 018 247 248 166 101 184 218 271 560 612
SOUNDESIGN	036
SUNFIRE	344 345 182
TEAC	005 019 049 040 212 217
TECHNICS	122 176 193 219 178 177 200 257 262
THETA DIGITAL	136
TOSHIBA	060 087 198 278
YAMAHA	026 253 169 067 173 205 264 232 089 264 274 715 717
ZENITH	143 210

**TV-Projectors**

Manufacturer/Brand	Set-Up Code Number
ACCURIAN	003 268
ADCOM	157
ADVENT	005
AIWA	146
AKAI	281
ALLEGRO	091
ALPINE	098
AMW	006 007
APEX DIGITAL	087 111 115
ARCAM	122
ASPIRE DIGITAL	008 009
AUDIOVOX	003 010 014 015 149
BEL CANTO DESIGN	016

**TV-Projectors**

Manufacturer/Brand	Set-Up Code Number
KOSS	216
KRELL	072 384 672
LEXICON	120 235 236 237 357 360
LINN	124 377
LUXMAN	009 139 052 165 115 004
MAGNAVOX	086 164 152 077
MARANTZ	006 028 031 040 063 185 186 265 289 492
MCINTOSH	238 286 311
MERIDIAN	100 012 013 628
MITSUBISHI	242 204
MONDIAL	157 158 042 043 081 112
MYRYAD	077
NAD	186 113
NAKAMICHI	040 244 245 172 183 287
NEC	176
NILES	403
ONKYO	275 017 046 108 080 209 381
OPTIMUS	026 041
OUTLAW	342
PANASONIC	032 195 219 177 292 626
PARASOUND	129 130 132 261 294 295 333 334
PHILIPS	249 250 063
PIONEER	014 039 044 069 168 116 035 063 198 480
PROCEED	144 268
RCA	010 048 117 156 067 288
REALISTIC	019 073 075 095
ROTEL	074 083 085
SAMSUNG	016
SANSUI	040 048 110 063 065 228
SANYO	214
SCOTT	019
SHARP	026 094 175
SHERWOOD	024 102 106 447 370
Sony	001 018 247 248 166 101 184 218 271 560 612
SOUNDESIGN	036
SUNFIRE	344 345 182
TEAC	005 019 049 040 212 217
TECHNICS	122 176 193 219 178 177 200 257 262
THETA DIGITAL	136
TOSHIBA	060 087 198 278
YAMAHA	026 253 169 067 173 205 264 232 089 264 274 715 717
ZENITH	143 210

**DVD**

Manufacturer/Brand	Set-Up Code Number
ACCURIAN	003 268
ADCOM	157
ADVENT	005
AIWA	146
AKAI	281
ALLEGRO	091
ALPINE	098
AMW	006 007
APEX DIGITAL	087 111 115
ARCAM	122
ASPIRE DIGITAL	008 009
AUDIOVOX	003 010 014 015 149
BEL CANTO DESIGN	016

**DVD**

Manufacturer/Brand</
----------------------